



















Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
3D Preset Views	x	x	x	x	x	x	x
3D View Projection (Perspective vs. Ortho)	x	x	x	x	x	x	x
3D View Settings	x	x	x	x	x	x	x
About Trimble Business Center	x	x	x	x	x	x	x
Access Services	x	x	x	x	x	x	x
ADAC SettingsV2 (SITECHCS)	x	x	x	x	x	x	x
Add External Job Site Design	x	x	x	x	x	x	x
Add Legend	x	x	x	x	x	x	x
Add Surface Texture	x	x	x	x	x	x	x
Add/Remove Selection	x	x	x	x	x	x	x
Add/Remove Surface Boundaries	x	x	x	x	x	x	x
Add/Remove Surface Members	x	x	x	x	x	x	x
Adjust Network	x	x	x	x	x	x	x
Adjust Traverse	x	x	x	x	x	x	x
Advanced Select	x	x	x	x	x	x	x
Alignment Editor	x	x	x	x	x	x	x
Alignment Geometry Report	x	x	x	x	x	x	x
ALTA/NSPS Allowable Relative Tolerance Report	x	x	x	x	x	x	x
Append to Alignment	x	x	x	x	x	x	x
Append Tracked Line	x	x	x	x	x	x	x
Archive Project	x	x	x	x	x	x	x
AreaLengthCountReport	x	x	x	x	x	x	x
As Staked Corridor Report	x	x	x	x	x	x	x
As Staked Report	x	x	x	x	x	x	x
Average Points	x	x	x	x	x	x	x
Back	x	x	x	x	x	x	x
Backward Planar View (Backward Camera View)	x	x	x	x	x	x	x
Baseline Processing Report	x	x	x	x	x	x	x
Batter Conformance Report	x	x	x	x	x	x	x
Bottom	x	x	x	x	x	x	x
Break Line	x	x	x	x	x	x	x
Bring Forward	x	x	x	x	x	x	x
Bring to Front	x	x	x	x	x	x	x
Browse For Import File	x	x	x	x	x	x	x
CAD Command Line	x	x	x	x	x	x	x
Calibrate Laser Scanners	x	x	x	x	x	x	x
Center	x	x	x	x	x	x	x
Change Coordinate System	x	x	x	x	x	x	x
Change Elevation	x	x	x	x	x	x	x
Change Global to Local	x	x	x	x	x	x	x
Change Local to Global	x	x	x	x	x	x	x
Check for Updates	x	x	x	x	x	x	x
Clear Adjustment Results	x	x	x	x	x	x	x
Clear Processing Results	x	x	x	x	x	x	x
Clear Site Calibration	x	x	x	x	x	x	x
Clear Traverse Adjustment Result	x	x	x	x	x	x	x
Clip Lines	x	x	x	x	x	x	x
Close Project	x	x	x	x	x	x	x
Colorize Scans	x	x	x	x	x	x	x
Combine Level Files	x	x	x	x	x	x	x
Command Pane	x	x	x	x	x	x	x
Compress/Email Field Data	x	x	x	x	x	x	x
Compute Project	x	x	x	x	x	x	x
Connected Community HCE	x	x	x	x	x	x	x
Controller Manager	x	x	x	x	x	x	x
Convert As-Staked Point	x	x	x	x	x	x	x
Convert CAD Points	x	x	x	x	x	x	x
Convert CSV to FXL	x	x	x	x	x	x	x
Convert Global to Local	x	x	x	x	x	x	x








Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Convert Local To Global	x	x	x	x	x	x	x
Convert to RINEX	x	x	x	x	x	x	x
Coordinate Scroll	x	x	x	x	x	x	x
Coordinate System Comparison Report	x	x	x	x	x	x	x
Coordinate System Manager	x	x	x	x	x	x	x
Copy Field Data to Data Card	x	x	x	x	x	x	x
Copy Field Data to USB Flash Drive	x	x	x	x	x	x	x
Copy Objects	x	x	x	x	x	x	x
Copy Project Library to USB Flash Drive	x	x	x	x	x	x	x
Copy Stored Cross-Section	x	x	x	x	x	x	x
Copy To Profile	x	x	x	x	x	x	x
Copy Work Order	x	x	x	x	x	x	x
Crack Display Settings	x	x	x	x	x	x	x
Create Alignment	x	x	x	x	x	x	x
Create Alignment From a GENIO 6D String	x	x	x	x	x	x	x
Create Angular Dimensions	x	x	x	x	x	x	x
Create Arc	x	x	x	x	x	x	x
Create Block	x	x	x	x	x	x	x
Create Boundary	x	x	x	x	x	x	x
Create Breakline	x	x	x	x	x	x	x
Create Circle	x	x	x	x	x	x	x
Create Contour at Elevation	x	x	x	x	x	x	x
Create Contours	x	x	x	x	x	x	x
Create Custom Report	x	x	x	x	x	x	x
Create Cut/Fill Map	x	x	x	x	x	x	x
Create Dependent Point	x	x	x	x	x	x	x
Create Hatch	x	x	x	x	x	x	x
Create Horizontal Alignment Label	x	x	x	x	x	x	x
Create Job Site Design	x	x	x	x	x	x	x
Create Leader Lines	x	x	x	x	x	x	x
Create Line Label Table	x	x	x	x	x	x	x
Create Linear Dimensions	x	x	x	x	x	x	x
Create Linestring	x	x	x	x	x	x	x
Create Linestring from Points	x	x	x	x	x	x	x
Create Planar Surface	x	x	x	x	x	x	x
Create Plotbox	x	x	x	x	x	x	x
Create Point	x	x	x	x	x	x	x
Create Point Label Table	x	x	x	x	x	x	x
Create Points at Intervals	x	x	x	x	x	x	x
Create Points from CAD	x	x	x	x	x	x	x
Create Polygon	x	x	x	x	x	x	x
Create Polygon Label Table	x	x	x	x	x	x	x
Create Polyline	x	x	x	x	x	x	x
Create Quick Contour at Elevation	x	x	x	x	x	x	x
Create Quick Contours	x	x	x	x	x	x	x
Create Rectangle	x	x	x	x	x	x	x
Create Stored Cross-Section	x	x	x	x	x	x	x
Create Surface	x	x	x	x	x	x	x
Create Surface Cross-Section	x	x	x	x	x	x	x
Create Surface Edge Breakline	x	x	x	x	x	x	x
Create Surface Elevation Grid	x	x	x	x	x	x	x
Create Surface Intersection	x	x	x	x	x	x	x
Create Surface Intersection Lines	x	x	x	x	x	x	x
Create Surface Profile	x	x	x	x	x	x	x
Create Surface Tie	x	x	x	x	x	x	x
Create Text	x	x	x	x	x	x	x
Create Three Point Circle	x	x	x	x	x	x	x
Create Three Point Rectangle	x	x	x	x	x	x	x
Create Volume Grid	x	x	x	x	x	x	x






Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Create Work Order	x	x	x	x	x	x	x
Create WorksManager Design	x	x	x	x	x	x	x
Create WorksOS Project	x	x	x	x	x	x	x
Cutting Plane View	x	x	x	x	x	x	x
Datum Gridding	x	x	x	x	x	x	x
Debug Selection	x	x	x	x	x	x	x
Define Command Shortcuts	x	x	x	x	x	x	x
Define Corridor Strata	x	x	x	x	x	x	x
Defined Views	x	x	x	x	x	x	x
Delete	x	x	x	x	x	x	x
Delete Line Segment	x	x	x	x	x	x	x
Delete Work Order	x	x	x	x	x	x	x
Densify An Alignment Based Surface	x	x	x	x	x	x	x
Detect Crossing Geometry	x	x	x	x	x	x	x
Device Pane	x	x	x	x	x	x	x
Dimension Style Manager	x	x	x	x	x	x	x
Disable Baselines	x	x	x	x	x	x	x
Disable Redundant Backsights	x	x	x	x	x	x	x
Disable Sessions	x	x	x	x	x	x	x
Disable Trajectories	x	x	x	x	x	x	x
Divide Line	x	x	x	x	x	x	x
Drape Objects On Surface	x	x	x	x	x	x	x
Earthwork Report	x	x	x	x	x	x	x
Edit	x	x	x	x	x	x	x
Edit Alignment Labels	x	x	x	x	x	x	x
Edit Color Mapping	x	x	x	x	x	x	x
Edit Custom Report	x	x	x	x	x	x	x
Edit Dependent Point	x	x	x	x	x	x	x
Edit Dimensions	x	x	x	x	x	x	x
Edit Label Table	x	x	x	x	x	x	x
Edit Limit Box	x	x	x	x	x	x	x
Edit Linestring	x	x	x	x	x	x	x
Edit Text	x	x	x	x	x	x	x
eLearning	x	x	x	x	x	x	x
Enable Baselines	x	x	x	x	x	x	x
Enable Sessions	x	x	x	x	x	x	x
Enable Trajectories	x	x	x	x	x	x	x
End-User License Agreement	x	x	x	x	x	x	x
Exit	x	x	x	x	x	x	x
Explode	x	x	x	x	x	x	x
Explode Points	x	x	x	x	x	x	x
Explore Object	x	x	x	x	x	x	x
Export .12da 12D Format Files (Basic)	x	x	x	x	x	x	x
Export .laz Point Clouds	x	x	x	x	x	x	x
Export ADAC File	x	x	x	x	x	x	x
Export Applanix Smartbase Format	x	x	x	x	x	x	x
Export BlueBook Format	x	x	x	x	x	x	x
Export DC Road Format From Corridor	x	x	x	x	x	x	x
Export DC Road Format From Surface	x	x	x	x	x	x	x
Export Digital Fieldbook Job File	x	x	x	x	x	x	x
Export DWG	x	x	x	x	x	x	x
Export DXF	x	x	x	x	x	x	x
Export e57 Point Clouds	x	x	x	x	x	x	x
Export e57 Structured	x	x	x	x	x	x	x
Export ESRI Shapefile Format	x	x	x	x	x	x	x
Export Field Data (Trimble Machine Control)	x	x	x	x	x	x	x
Export Field Surveyor V2 Job File	x	x	x	x	x	x	x
Export Format Editor	x	x	x	x	x	x	x
Export GCS900 Excavator Profile Files	x	x	x	x	x	x	x

Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Export GCS900 Machine Avoidance Zone File	x	x	x	x	x	x	x
Export GCS900 Machine Jobsite Design	x	x	x	x	x	x	x
Export GCS900 Machine Site Map	x	x	x	x	x	x	x
Export Google KML/KMZ Format	x	x	x	x	x	x	x
Export IFC	x	x	x	x	x	x	x
Export Inframodel File	x	x	x	x	x	x	x
Export KOF Vector Data File	x	x	x	x	x	x	x
Export LandXML File	x	x	x	x	x	x	x
Export las Point Clouds	x	x	x	x	x	x	x
Export Measure Codes Definition File (.MCD)	x	x	x	x	x	x	x
Export pod point Clouds	x	x	x	x	x	x	x
Export Project Link Exporter VCL File	x	x	x	x	x	x	x
Export pts Point Clouds	x	x	x	x	x	x	x
Export ptx Point Clouds	x	x	x	x	x	x	x
Export rcp Point Clouds (Autodesk recap)	x	x	x	x	x	x	x
Export RINEX Format	x	x	x	x	x	x	x
Export RXL Road Format from Alignment	x	x	x	x	x	x	x
Export RXL Road Format From Surface	x	x	x	x	x	x	x
Export SDMS Format	x	x	x	x	x	x	x
Export SIMA Format	x	x	x	x	x	x	x
Export Sketchup .skp Files	x	x	x	x	x	x	x
Export Somero .nod Files	x	x	x	x	x	x	x
Export SOSI Format	x	x	x	x	x	x	x
Export Survey Controller Job File	x	x	x	x	x	x	x
Export Survey Data Collector DC File	x	x	x	x	x	x	x
Export Survey Pro Job File	x	x	x	x	x	x	x
Export TDS Interlock (.ilj) File	x	x	x	x	x	x	x
Export Trajectory CSV File	x	x	x	x	x	x	x
Export Trimble Access job File	x	x	x	x	x	x	x
Export Trimble Access Road Strings	x	x	x	x	x	x	x
Export Trimble Access RXL Road Templates	x	x	x	x	x	x	x
Export Trimble Data Exchange Format (TDEF) File	x	x	x	x	x	x	x
Export Trimble JobXML Field Software Format	x	x	x	x	x	x	x
Export TTM File	x	x	x	x	x	x	x
External Processing Services	x	x	x	x	x	x	x
Feature Attributes Export	x	x	x	x	x	x	x
Feature Code Processing Report	x	x	x	x	x	x	x
Feature Definition Manager	x	x	x	x	x	x	x
Fillet/Chamfer	x	x	x	x	x	x	x
Filter Line Markings	x	x	x	x	x	x	x
Find and Replace	x	x	x	x	x	x	x
Finished Pavement Report	x	x	x	x	x	x	x
Finished Surface Report	x	x	x	x	x	x	x
Flags Pane	x	x	x	x	x	x	x
Flatten Surface	x	x	x	x	x	x	x
Flip an Azimuth Bearing Label	x	x	x	x	x	x	x
Float View	x	x	x	x	x	x	x
Force Continuous	x	x	x	x	x	x	x
Front	x	x	x	x	x	x	x
Geodatabase XML Exporter	x	x	x	x	x	x	x
Geoid Sub-Gridding	x	x	x	x	x	x	x
Geometry Report	x	x	x	x	x	x	x
GNSS Loop Closure	x	x	x	x	x	x	x
GNSS Loop Closure Results Report	x	x	x	x	x	x	x
Go To Run Position	x	x	x	x	x	x	x
Google Earth	x	x	x	x	x	x	x
Help	x	x	x	x	x	x	x
Imaging Config	x	x	x	x	x	x	x
Import	x	x	x	x	x	x	x








Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Import .12da File (Basic)	x	x	x	x	x	x	x
Import .asc ASCII, TDEF, Raw Data, InRoads Hz and Vt Alignment Files	x	x	x	x	x	x	x
Import .CAL Site Calibration Files	x	x	x	x	x	x	x
Import .dat DiNi Level Files	x	x	x	x	x	x	x
Import .dat STAR*Net Level Files	x	x	x	x	x	x	x
Import .eje MDT Hz Alignment Files	x	x	x	x	x	x	x
Import .inf Fast Survey Files	x	x	x	x	x	x	x
Import .pbj Rangefinder Laser Files	x	x	x	x	x	x	x
Import .raw (TDS, Nikon) Raw Data Files	x	x	x	x	x	x	x
Import .sp3, sp3c precise ephemeris files	x	x	x	x	x	x	x
Import .TRB TrimBim Files	x	x	x	x	x	x	x
Import .xyz point Cloud Files	x	x	x	x	x	x	x
Import .xyz Point Cloud Files	x	x	x	x	x	x	x
Import 12d Color File	x	x	x	x	x	x	x
Import ASCII CSV Files - PNEZD	x	x	x	x	x	x	x
Import ASCII CSV Files - Station, Offset, Elevation	x	x	x	x	x	x	x
Import Ashtech ProMark / ProFlex .crd Format	x	x	x	x	x	x	x
Import Ashtech ProMark / ProFlex .ddd Format	x	x	x	x	x	x	x
Import Autodesk DWG Format	x	x	x	x	x	x	x
Import Autodesk DXF Format	x	x	x	x	x	x	x
Import Bentley .icm.dgn iModel Files	x	x	x	x	x	x	x
Import Bentley Microstation dgn files	x	x	x	x	x	x	x
Import Blocks	x	x	x	x	x	x	x
Import Business Center - HCE .VCL Project Link Files	x	x	x	x	x	x	x
Import CaAiCE .txt Files	x	x	x	x	x	x	x
Import Cartomap .txt Files	x	x	x	x	x	x	x
Import CLIP .alz Alignment Files	x	x	x	x	x	x	x
Import CLIP .plt Alignment Files	x	x	x	x	x	x	x
Import CLIP .trv Files	x	x	x	x	x	x	x
Import e57 Format	x	x	x	x	x	x	x
Import ESRI Shapefile Format	x	x	x	x	x	x	x
Import Fast Survey .sys Files	x	x	x	x	x	x	x
Import Format Editor	x	x	x	x	x	x	x
Import GCS900 .avoid Format	x	x	x	x	x	x	x
Import GCS900 .avoid.svl Avoidance Zone Files	x	x	x	x	x	x	x
Import GCS900 .cfg Coordinate System Files	x	x	x	x	x	x	x
Import GCS900 .dsp Format	x	x	x	x	x	x	x
Import GCS900 .mch Format	x	x	x	x	x	x	x
Import GCS900 .mch Measure Up Files	x	x	x	x	x	x	x
Import GCS900 .persist Format	x	x	x	x	x	x	x
Import GCS900 .pro Format	x	x	x	x	x	x	x
Import GCS900 .svd Files	x	x	x	x	x	x	x
Import GCS900 .svd Format	x	x	x	x	x	x	x
Import GCS900 .svl Files	x	x	x	x	x	x	x
Import GCS900 .svl Format	x	x	x	x	x	x	x
Import GCS900 .tsd Format	x	x	x	x	x	x	x
Import Geopak .xsr Cross Section Report File	x	x	x	x	x	x	x
Import HYDROpro .hpt Files	x	x	x	x	x	x	x
Import IFC Files	x	x	x	x	x	x	x
Import Inframodel .xml Files	x	x	x	x	x	x	x
Import InRoads .soe Files	x	x	x	x	x	x	x
Import IREDES .xml Tunnel and Drill Plan Files	x	x	x	x	x	x	x
Import ISPOL .ali Alignment Files	x	x	x	x	x	x	x
Import ISPOL .ras Vertical Alignment Files	x	x	x	x	x	x	x
Import ISPOL .sce and .scl Files	x	x	x	x	x	x	x
Import LandXML Format	x	x	x	x	x	x	x
Import LAS/LAZ Format	x	x	x	x	x	x	x
Import MDT .ras Vertical Alignment Files	x	x	x	x	x	x	x






Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Import MDT .tra Files	x	x	x	x	x	x	x
Import Measure Codes Definition File (.MCD)	x	x	x	x	x	x	x
Import MX GENIO .crd, .mos, .txt Files	x	x	x	x	x	x	x
Import NGS .ds Data Sheet Files	x	x	x	x	x	x	x
Import NGS .htm Data Sheet Files	x	x	x	x	x	x	x
Import NGS OPUS .xml Files	x	x	x	x	x	x	x
Import Nikon Job File	x	x	x	x	x	x	x
Import Norway .KOF Files	x	x	x	x	x	x	x
Import Norway .tit Files	x	x	x	x	x	x	x
Import Novapoint .gen Files	x	x	x	x	x	x	x
Import Novapoint .vgp Files	x	x	x	x	x	x	x
Import PCS900 .persist Display Configuration Files	x	x	x	x	x	x	x
Import POD Format	x	x	x	x	x	x	x
Import PTS Format	x	x	x	x	x	x	x
Import PTX Format	x	x	x	x	x	x	x
Import RCP Format	x	x	x	x	x	x	x
Import REB .021 Files	x	x	x	x	x	x	x
Import REB .040 Files	x	x	x	x	x	x	x
Import REB .066 Files	x	x	x	x	x	x	x
Import REB .66 Files	x	x	x	x	x	x	x
Import Report	x	x	x	x	x	x	x
Import Report	x	x	x	x	x	x	x
Import SBG .geo Files	x	x	x	x	x	x	x
Import SBG .gt Files	x	x	x	x	x	x	x
Import SBG .lin Files	x	x	x	x	x	x	x
Import SBG .llc Files	x	x	x	x	x	x	x
Import SBG .lmd Files	x	x	x	x	x	x	x
Import SBG .nyl Files	x	x	x	x	x	x	x
Import SBG .prf Files	x	x	x	x	x	x	x
Import SBG .pxy Files	x	x	x	x	x	x	x
Import SBG .sec Files	x	x	x	x	x	x	x
Import SBG .skv Files	x	x	x	x	x	x	x
Import SCS900 .gcj Work Order Files	x	x	x	x	x	x	x
Import SCS900 .ini Site Settings File	x	x	x	x	x	x	x
Import SCS900 .spj Work Order Files	x	x	x	x	x	x	x
Import SCS900 .txt Work Order Results File	x	x	x	x	x	x	x
Import Sitepulse .epj Work Order Result Files	x	x	x	x	x	x	x
Import Sketchup .skp Files	x	x	x	x	x	x	x
Import Somero .nod Files	x	x	x	x	x	x	x
Import SOSI Format	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor .asc Format	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor .dat Format	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor .xml Format	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor ASCII Format	x	x	x	x	x	x	x
Import Spectra Precision Focus DL-15 Level Files	x	x	x	x	x	x	x
Import Survey Pro .job Format	x	x	x	x	x	x	x
Import Survey Pro .raw Format	x	x	x	x	x	x	x
Import Survey Pro .survey Format	x	x	x	x	x	x	x
Import Survey Pro .xml Format	x	x	x	x	x	x	x
Import TDS Interlock .ilj Format	x	x	x	x	x	x	x
Import Terramodel PRO Files	x	x	x	x	x	x	x
Import Trimble .dat GNSS Files	x	x	x	x	x	x	x
Import Trimble .dc Data Collector Files	x	x	x	x	x	x	x
Import Trimble .dc Site Calibration Files	x	x	x	x	x	x	x
Import Trimble .FXL Feature Code Library Files	x	x	x	x	x	x	x
Import Trimble .pav Paving Run Files	x	x	x	x	x	x	x
Import Trimble .RXL RoadXML Files	x	x	x	x	x	x	x
Import Trimble .tdx Data Exchange Files	x	x	x	x	x	x	x
Import Trimble .tsf Scanner Files	x	x	x	x	x	x	x








Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Import Trimble .tmm Surface Model Files	x	x	x	x	x	x	x
Import Trimble Access .dc Format	x	x	x	x	x	x	x
Import Trimble Access .job Format	x	x	x	x	x	x	x
Import Trimble Access .jxl Format	x	x	x	x	x	x	x
Import Trimble Access .rxl Format	x	x	x	x	x	x	x
Import Trimble Access .xml Format	x	x	x	x	x	x	x
Import Trimble Digital Fieldbook .dc Format	x	x	x	x	x	x	x
Import Trimble Digital Fieldbook .job Format	x	x	x	x	x	x	x
Import Trimble Digital Fieldbook .xml Format	x	x	x	x	x	x	x
Import Trimble GNSS .dat Format	x	x	x	x	x	x	x
Import Trimble GNSS .t00, .t01, .t02 Files	x	x	x	x	x	x	x
Import Trimble GNSS .t00/t01/t02 Format	x	x	x	x	x	x	x
Import Trimble Survey Controller .dc Format	x	x	x	x	x	x	x
Import Trimble Survey Controller .job Format	x	x	x	x	x	x	x
Import Trimble Survey Controller .jxl Format	x	x	x	x	x	x	x
Import Trimble Survey Controller .rxl Format	x	x	x	x	x	x	x
Import Trimble Survey Controller .xml Format	x	x	x	x	x	x	x
Import Trimble Survey Manager .jxl Format	x	x	x	x	x	x	x
Import Trimble Survey Manager ASCII Format	x	x	x	x	x	x	x
Import Trimble Survey Pro .survey files	x	x	x	x	x	x	x
Import Wirth .xyz Files	x	x	x	x	x	x	x
Import Work Order Results	x	x	x	x	x	x	x
Import/Export User Options	x	x	x	x	x	x	x
Insert Blocks	x	x	x	x	x	x	x
Internet Download	x	x	x	x	x	x	x
Inverse	x	x	x	x	x	x	x
Inverse Results Report	x	x	x	x	x	x	x
Invert Selection	x	x	x	x	x	x	x
Job Report Generator	x	x	x	x	x	x	x
Job Site Design Manager	x	x	x	x	x	x	x
Job Site Manager	x	x	x	x	x	x	x
Join Lines	x	x	x	x	x	x	x
Label Contours By Crossing	x	x	x	x	x	x	x
Label Lines	x	x	x	x	x	x	x
Label Points	x	x	x	x	x	x	x
Label Polygons	x	x	x	x	x	x	x
Label Style Manager	x	x	x	x	x	x	x
Label Table Style Manager	x	x	x	x	x	x	x
Labelling Scale Factor	x	x	x	x	x	x	x
Layer Group Manager	x	x	x	x	x	x	x
Layer Manager	x	x	x	x	x	x	x
Left	x	x	x	x	x	x	x
Left Mouse Pan	x	x	x	x	x	x	x
Left Mouse Rotate	x	x	x	x	x	x	x
Left Mouse Select	x	x	x	x	x	x	x
Left Mouse Zoom	x	x	x	x	x	x	x
Level Editor	x	x	x	x	x	x	x
Level Report	x	x	x	x	x	x	x
License Manager	x	x	x	x	x	x	x
Line Style Manager	x	x	x	x	x	x	x
Line Type Editor	x	x	x	x	x	x	x
Local Site Settings	x	x	x	x	x	x	x
Map Objects	x	x	x	x	x	x	x
Match Properties	x	x	x	x	x	x	x
Material and Site Improvement Manager	x	x	x	x	x	x	x
Mean Angle Report	x	x	x	x	x	x	x
Mean Angle Residuals	x	x	x	x	x	x	x
Measure Angle	x	x	x	x	x	x	x
Measure Distance	x	x	x	x	x	x	x






Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Measure Point	x	x	x	x	x	x	x
Measure Volume	x	x	x	x	x	x	x
Merge Points	x	x	x	x	x	x	x
Merge Surfaces	x	x	x	x	x	x	x
Mirror Objects	x	x	x	x	x	x	x
Move Objects	x	x	x	x	x	x	x
Move Survey Point	x	x	x	x	x	x	x
Move to Next Tab Group	x	x	x	x	x	x	x
Move to Previous Tab Group	x	x	x	x	x	x	x
Move/Rotate/Scale Objects	x	x	x	x	x	x	x
Move/Rotate/Scale Objects by Points	x	x	x	x	x	x	x
MSI Report	x	x	x	x	x	x	x
Name Objects	x	x	x	x	x	x	x
Network Adjustment Report	x	x	x	x	x	x	x
New 3D Drive View	x	x	x	x	x	x	x
New 3D View	x	x	x	x	x	x	x
New Cross-Section View	x	x	x	x	x	x	x
New Default Project	x	x	x	x	x	x	x
New Feature Library	x	x	x	x	x	x	x
New Feature Spreadsheet	x	x	x	x	x	x	x
New Horizontal Tab Group	x	x	x	x	x	x	x
New Layer	x	x	x	x	x	x	x
New Oblique Camera View	x	x	x	x	x	x	x
New Occupation Spreadsheet	x	x	x	x	x	x	x
New Optical Spreadsheet	x	x	x	x	x	x	x
New Plan View	x	x	x	x	x	x	x
New Plan View (old architecture)	x	x	x	x	x	x	x
New Points Spreadsheet	x	x	x	x	x	x	x
New Profile View	x	x	x	x	x	x	x
New Project	x	x	x	x	x	x	x
New Station View	x	x	x	x	x	x	x
New Station View (referenced images)	x	x	x	x	x	x	x
New Time-Based View	x	x	x	x	x	x	x
New Vector Spreadsheet	x	x	x	x	x	x	x
New Vertical Tab Group	x	x	x	x	x	x	x
Office Synchronizer	x	x	x	x	x	x	x
Offset Line	x	x	x	x	x	x	x
Online GNSS Planning	x	x	x	x	x	x	x
Open Project	x	x	x	x	x	x	x
Open Remote File	x	x	x	x	x	x	x
Options	x	x	x	x	x	x	x
Orthographic	x	x	x	x	x	x	x
Page Setup	x	x	x	x	x	x	x
Pan	x	x	x	x	x	x	x
Pan Precise	x	x	x	x	x	x	x
Pavement Conformance Report	x	x	x	x	x	x	x
Pavement Conformance Report (Advanced)	x	x	x	x	x	x	x
Perspective	x	x	x	x	x	x	x
Pipeline Attributes	x	x	x	x	x	x	x
Plane Manager	x	x	x	x	x	x	x
Planning	x	x	x	x	x	x	x
Point Comparison Report	x	x	x	x	x	x	x
Point Derivation Report	x	x	x	x	x	x	x
Point List Report	x	x	x	x	x	x	x
Point Symbol	x	x	x	x	x	x	x
Points to Surface	x	x	x	x	x	x	x
Points to Surface Report	x	x	x	x	x	x	x
Polygon Select	x	x	x	x	x	x	x
Presentation Mode	x	x	x	x	x	x	x








Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Print	x	x	x	x	x	x	x
Print Preview	x	x	x	x	x	x	x
Process Baselines	x	x	x	x	x	x	x
Process Feature Codes	x	x	x	x	x	x	x
Process SCS work order symbols	x	x	x	x	x	x	x
Process View	x	x	x	x	x	x	x
Processing Services	x	x	x	x	x	x	x
Profile Viewer	x	x	x	x	x	x	x
Project Computation Report	x	x	x	x	x	x	x
Project Explorer	x	x	x	x	x	x	x
Project Settings	x	x	x	x	x	x	x
Properties	x	x	x	x	x	x	x
Publish Designs to WorksManager	x	x	x	x	x	x	x
Publish Field Data To Business Data Center	x	x	x	x	x	x	x
Publish Field Data to Project Library	x	x	x	x	x	x	x
Publish Library to USB	x	x	x	x	x	x	x
Publish to Clarity	x	x	x	x	x	x	x
Publish to TCC	x	x	x	x	x	x	x
Publish to WorksOS	x	x	x	x	x	x	x
Purge Blocks	x	x	x	x	x	x	x
Quadri Connector	x	x	x	x	x	x	x
Quality Assurance Report	x	x	x	x	x	x	x
Quality Assurance Report	x	x	x	x	x	x	x
Reassign External Job Site Design	x	x	x	x	x	x	x
Reassign Work Order	x	x	x	x	x	x	x
REB 21.003 Volume Report	x	x	x	x	x	x	x
REB 21.033 Linear Surface Areas Report	x	x	x	x	x	x	x
REB 22.013 Prismatic Volume Report	x	x	x	x	x	x	x
REB 23.003 Calculation Report	x	x	x	x	x	x	x
REB Tools	x	x	x	x	x	x	x
Rebuild Alignment Labels	x	x	x	x	x	x	x
Rebuild Contours	x	x	x	x	x	x	x
Rebuild Surface	x	x	x	x	x	x	x
Rectangle Select	x	x	x	x	x	x	x
Redo	x	x	x	x	x	x	x
Related Files	x	x	x	x	x	x	x
Relayer Objects	x	x	x	x	x	x	x
Rename Points	x	x	x	x	x	x	x
Renamed Point List Report	x	x	x	x	x	x	x
Report Options	x	x	x	x	x	x	x
Reverse Lines	x	x	x	x	x	x	x
Right	x	x	x	x	x	x	x
Rotate Objects	x	x	x	x	x	x	x
Run Last Command	x	x	x	x	x	x	x
Run View (Panoramic View)	x	x	x	x	x	x	x
Save As Clone	x	x	x	x	x	x	x
Save As Site	x	x	x	x	x	x	x
Save File Remotely	x	x	x	x	x	x	x
Save Project	x	x	x	x	x	x	x
Save Project As	x	x	x	x	x	x	x
Save Project As Template	x	x	x	x	x	x	x
Scale Objects	x	x	x	x	x	x	x
SCS Data Manager	x	x	x	x	x	x	x
Select All	x	x	x	x	x	x	x
Select by Elevation Range	x	x	x	x	x	x	x
Select by Layer	x	x	x	x	x	x	x
Select by Polygon	x	x	x	x	x	x	x
Select Duplicate Points	x	x	x	x	x	x	x
Select Observations	x	x	x	x	x	x	x








Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Select Points	x	x	x	x	x	x	x
Select Points by Vector	x	x	x	x	x	x	x
Select Similar	x	x	x	x	x	x	x
Select Unprocessed Sessions	x	x	x	x	x	x	x
Selection Explorer	x	x	x	x	x	x	x
Send Backward	x	x	x	x	x	x	x
Send to Back	x	x	x	x	x	x	x
Send to RTX-PP	x	x	x	x	x	x	x
Session Editor	x	x	x	x	x	x	x
Set Limit Box	x	x	x	x	x	x	x
Set Line Elevation	x	x	x	x	x	x	x
Set Menu Layout	x	x	x	x	x	x	x
Shrink 3D Faces	x	x	x	x	x	x	x
Side Planar View (Side Camera View)	x	x	x	x	x	x	x
Site Calibration	x	x	x	x	x	x	x
Site Calibration Report	x	x	x	x	x	x	x
SiteVision AR Exporter	x	x	x	x	x	x	x
Snap Mode	x	x	x	x	x	x	x
Spectra Geospatial Origin Job File Exporter	x	x	x	x	x	x	x
Standardize Layers	x	x	x	x	x	x	x
Start Data Service	x	x	x	x	x	x	x
Start Page	x	x	x	x	x	x	x
Station Panorama Exporter	x	x	x	x	x	x	x
Station View Image Filter	x	x	x	x	x	x	x
Stored Cross-Section Editor	x	x	x	x	x	x	x
Stored Measurements Report	x	x	x	x	x	x	x
String Report	x	x	x	x	x	x	x
Surface Information Report	x	x	x	x	x	x	x
Surface Slicer View	x	x	x	x	x	x	x
Swap Label Sides	x	x	x	x	x	x	x
Swap Surface Triangles	x	x	x	x	x	x	x
Symbol Editor	x	x	x	x	x	x	x
Symbol Manager	x	x	x	x	x	x	x
TDX Export	x	x	x	x	x	x	x
Text Style Manager	x	x	x	x	x	x	x
Tile Sequence Viewer	x	x	x	x	x	x	x
Toggle Gridlines	x	x	x	x	x	x	x
Toggle Line Marking	x	x	x	x	x	x	x
Toggle Visibility	x	x	x	x	x	x	x
Toggle Z-Axis	x	x	x	x	x	x	x
Top	x	x	x	x	x	x	x
TopoDOT Export - Terrestrial Scan Data	x	x	x	x	x	x	x
Total Station Editor	x	x	x	x	x	x	x
Tours and Tutorials	x	x	x	x	x	x	x
Track Region Outline	x	x	x	x	x	x	x
Traverse Adjustment Report	x	x	x	x	x	x	x
Trim Surface Edge	x	x	x	x	x	x	x
Trim/Extend Lines	x	x	x	x	x	x	x
Trimble Access Roads Strings	x	x	x	x	x	x	x
Trimble Access Roads RXL Templates	x	x	x	x	x	x	x
Trimble Access Services	x	x	x	x	x	x	x
Trimble Clarity	x	x	x	x	x	x	x
Trimble Sync	x	x	x	x	x	x	x
Trimble Sync Manager	x	x	x	x	x	x	x
Undo	x	x	x	x	x	x	x
Vector List Report	x	x	x	x	x	x	x
View 3D Preset Last Used	x	x	x	x	x	x	x
View Filter Manager	x	x	x	x	x	x	x
View Mission Trajectory (Toggle Trajectory)	x	x	x	x	x	x	x








Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Walk-Through	x	x	x	x	x	x	x
Work Order Editor	x	x	x	x	x	x	x
Work Order Report	x	x	x	x	x	x	x
Work Order Report	x	x	x	x	x	x	x
Work Orders Summary	x	x	x	x	x	x	x
Workflow Guides	x	x	x	x	x	x	x
WorksManager	x	x	x	x	x	x	x
WorksManager Design Manager	x	x	x	x	x	x	x
WorksManager Field Data to USB Drive	x	x	x	x	x	x	x
WorksManager Project	x	x	x	x	x	x	x
WorksOS	x	x	x	x	x	x	x
Write Features to GIS Report	x	x	x	x	x	x	x
Write FXL to CSV	x	x	x	x	x	x	x
X7 Export to TMX	x	x	x	x	x	x	x
Zoom	x	x	x	x	x	x	x
Zoom Extents	x	x	x	x	x	x	x
Zoom In	x	x	x	x	x	x	x
Zoom Out	x	x	x	x	x	x	x
Zoom Precise	x	x	x	x	x	x	x
Add to Point Cloud Region		x	x	x	x	x	x
Add/Remove Image Boundaries		x	x	x	x	x	x
Apply Surface Site Improvement		x	x	x	x	x	x
Best-Fit Line		x	x	x	x	x	x
Big Point Size		x	x	x	x	x	x
Blended Display		x	x	x	x	x	x
Build Sheets		x	x	x	x	x	x
Camera Calibration		x	x	x	x	x	x
Camera Calibration Check Report		x	x	x	x	x	x
Capture 3D		x	x	x	x	x	x
Capture Image		x	x	x	x	x	x
Clip Selected		x	x	x	x	x	x
Clip Unselected		x	x	x	x	x	x
Color Regions By Elevation		x	x	x	x	x	x
Colorize Region		x	x	x	x	x	x
Combine Surfaces		x	x	x	x	x	x
Copy to Sheet		x	x	x	x	x	x
Copy View To Clipboard		x	x	x	x	x	x
Corridor Definition Report		x	x	x	x	x	x
Corridor Earthwork Report		x	x	x	x	x	x
Create 3D PDF		x	x	x	x	x	x
Create CAD Points from Scan Points (Scan to CAD)		x	x	x	x	x	x
Create COGO		x	x	x	x	x	x
Create Corridor		x	x	x	x	x	x
Create Corridor Surface		x	x	x	x	x	x
Create Custom Sheet		x	x	x	x	x	x
Create Dynaview		x	x	x	x	x	x
Create Dynaview Boundary Collection		x	x	x	x	x	x
Create Machine Data Overlay		x	x	x	x	x	x
Create Machine Data Surface		x	x	x	x	x	x
Create Plan Set		x	x	x	x	x	x
Create Point Cloud (non-Aerial)		x	x	x	x	x	x
Create Point Cloud Region		x	x	x	x	x	x
Create Points from Spot Elevations		x	x	x	x	x	x
Create Projected Surface		x	x	x	x	x	x
Create Quick Profile		x	x	x	x	x	x
Create Radial Surface		x	x	x	x	x	x
Create Rectified Image		x	x	x	x	x	x
Create Scale Bar		x	x	x	x	x	x
Create Shareable Slope Table		x	x	x	x	x	x







Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Create Sheet Set		x	x	x	x	x	x
Create Side Slope		x	x	x	x	x	x
Create Subgrade Surface		x	x	x	x	x	x
Create Tunnel Inspection Map		x	x	x	x	x	x
Create Uncompacted PCS Surface		x	x	x	x	x	x
Create Vertical Design		x	x	x	x	x	x
Define Depth Plane		x	x	x	x	x	x
Delete Dynaview Boundary Collection		x	x	x	x	x	x
Detailed Cell Viewer		x	x	x	x	x	x
Double Proportioning		x	x	x	x	x	x
Double Proportioning Report		x	x	x	x	x	x
Drafting Templates		x	x	x	x	x	x
Dynaview Collection		x	x	x	x	x	x
Edit Corridor		x	x	x	x	x	x
Edit Corridor Template		x	x	x	x	x	x
Edit Dynaview Boundary Collection		x	x	x	x	x	x
Edit Machine Data		x	x	x	x	x	x
Edit Shareable Slope Table		x	x	x	x	x	x
Edit Sheet Set		x	x	x	x	x	x
Edit Vertical Design		x	x	x	x	x	x
Edit/View Machine Data Overlay		x	x	x	x	x	x
Elevate Contour		x	x	x	x	x	x
Elevate Contours by Crossing		x	x	x	x	x	x
Elevate Contours by Label		x	x	x	x	x	x
Elevate Lines		x	x	x	x	x	x
Elevate Pads		x	x	x	x	x	x
Explode Dynaview Grid		x	x	x	x	x	x
Explode Surface		x	x	x	x	x	x
Extra Large Point Size		x	x	x	x	x	x
Flight Mission Exporter		x	x	x	x	x	x
Georeference Image		x	x	x	x	x	x
Georeference Vector PDF		x	x	x	x	x	x
Get All points		x	x	x	x	x	x
Get Unused Points		x	x	x	x	x	x
Grid Style Manager		x	x	x	x	x	x
Group Photo Stations		x	x	x	x	x	x
History Log View		x	x	x	x	x	x
Import MXDB Database		x	x	x	x	x	x
Import Vector PDF Data		x	x	x	x	x	x
Insert Corridor Template		x	x	x	x	x	x
Insert Image		x	x	x	x	x	x
Intensity Based Filtering		x	x	x	x	x	x
Keep In		x	x	x	x	x	x
Keep Out		x	x	x	x	x	x
Large Point Size		x	x	x	x	x	x
Legal Description Writer		x	x	x	x	x	x
Macros		x	x	x	x	x	x
Manage Material Layers		x	x	x	x	x	x
Manage Template Node Names		x	x	x	x	x	x
Manual (MX7) Camera Calibration		x	x	x	x	x	x
Manual Camera Calibration		x	x	x	x	x	x
Map Check Report		x	x	x	x	x	x
Map Layers		x	x	x	x	x	x
Mapillary Panorama Exporter		x	x	x	x	x	x
Measure Photo Point		x	x	x	x	x	x
Medium Point Size		x	x	x	x	x	x
Merge Regions		x	x	x	x	x	x
Merge Survey Projects		x	x	x	x	x	x
MX9 Export to Solv3D		x	x	x	x	x	x





Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
New Block Edit View		x	x	x	x	x	x
New Photo Point Spreadsheet		x	x	x	x	x	x
New Sheet View		x	x	x	x	x	x
Normal Shading		x	x	x	x	x	x
Number of loaded points (display Options)		x	x	x	x	x	x
Place Image		x	x	x	x	x	x
Point Cloud Rendering Settings		x	x	x	x	x	x
Print Plan Set		x	x	x	x	x	x
Process Panoramas		x	x	x	x	x	x
Project Cleanup		x	x	x	x	x	x
Render Point Cloud Region		x	x	x	x	x	x
Render Point Cloud Region Using Color-Coded Intensity		x	x	x	x	x	x
Render Point Cloud Region Using Gray-Scale Intensity		x	x	x	x	x	x
Render Point Cloud Region Using Region Color		x	x	x	x	x	x
Render Point Cloud Region Using Scan Color		x	x	x	x	x	x
Render Point Cloud Regions Using Color by Elevation		x	x	x	x	x	x
Render Point Cloud Regions Using True Color		x	x	x	x	x	x
RenderByBlendedIntensity		x	x	x	x	x	x
Rendering Settings		x	x	x	x	x	x
RenderPointCloudSwitch		x	x	x	x	x	x
Reproject Surface		x	x	x	x	x	x
Restore All		x	x	x	x	x	x
Restore Region		x	x	x	x	x	x
Roughness Index Report		x	x	x	x	x	x
Sample Point Cloud Regions		x	x	x	x	x	x
Sample Point Clouds		x	x	x	x	x	x
Show Map		x	x	x	x	x	x
Single Proportioning		x	x	x	x	x	x
Single Proportioning Report		x	x	x	x	x	x
Small Point Size		x	x	x	x	x	x
Station Offset Elevation Report		x	x	x	x	x	x
Superelevation Diagram		x	x	x	x	x	x
Superelevation View		x	x	x	x	x	x
Switch Point Size		x	x	x	x	x	x
Terrestrial Bundle Adjustment Report		x	x	x	x	x	x
Toggle Background Map		x	x	x	x	x	x
TopoDOT Export - Mobile Mapping Data		x	x	x	x	x	x
Transform Survey Points		x	x	x	x	x	x
Transform Survey Points Report		x	x	x	x	x	x
Trimble MX Cubical Exporter		x	x	x	x	x	x
Trimble MX Panorama Exporter		x	x	x	x	x	x
Variable Offset Line		x	x	x	x	x	x
Virtual DR		x	x	x	x	x	x
XML Horus Exporter		x	x	x	x	x	x
Add GIS Connection			x	x			x
Ambient Shading Display			x	x			x
Assign Monitoring Project			x	x			x
Create High and Low Point			x	x			x
Create Monitoring Points			x	x			x
Create Orthophoto			x	x			x
Create Scan Station			x	x			x
Export ESRI File Geodatabase			x	x			x
Extract Classified Point Cloud Regions			x	x			x
Extract Cross-sections From Point Cloud			x	x			x
Extract Line Feature			x	x			x
Extract Point Feature			x	x			x
Filter Scan Station Points			x	x			x
Georeference Scan			x	x			x
Get GIS Schema			x	x			x








Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
GIS Connection Manager			x	x			x
Import .cor Files			x	x			x
Import ESRI File Geodatabase			x	x			x
Import FLS Scan Files			x	x			x
Import SSF Files			x	x			x
Import TZF Scan Files			x	x			x
Map Metadata			x	x			x
Measure Vertical Clearance			x	x			x
Monitoring Points Spreadsheet			x	x			x
No Shading Display			x	x			x
Normal Shading Display			x	x			x
Outline Visibility Mode			x	x			x
Point Cloud Region Classifier (Classify Point Clouds)			x	x			x
Point Cloud Smart Picking			x	x			x
Read Features from GIS			x	x			x
Remove GIS Connection			x	x			x
Scan Georeferencing			x	x			x
Scan Refinement Report			x	x			x
Scan Registration			x	x			x
See Inside Visibility Mode			x	x			x
Show Monitoring Chart			x	x			x
Show Monitoring Report			x	x			x
Sync Monitoring Project			x	x			x
Write Features to GIS			x	x			x
Add/Remove Members to Station/Offset View				x	x		
Analyze Earthwork Balance				x	x		
Archive Mass Haul				x	x		
Auto-Balance Mass Haul				x	x		
Auto-Balance Mass Haul for All Materials				x	x		
Balance Line Report				x	x		
Balance Mass Haul at Grade Point				x	x		
Boring Log Report				x	x		
Build Takeoff Surfaces				x	x		
Categorize Takeoff Layers				x	x		
Check Intersection Geometry				x	x		
Clear Mass Haul Balances				x	x		
Compute Region Volume				x	x		
Configure Subgrade Adjustments				x	x		
Convert to Haul Road				x	x		
Corridor Mass Haul Diagram				x	x		
Corridor Mass Haul Report				x	x		
Create Boring Log				x	x		
Create Boundary by Site Improvement				x	x		
Create Corridor Boring Log				x	x		
Create Corridor Mass Haul Analysis				x	x		
Create Cul-de-Sac				x	x		
Create Earthworks Site				x	x		
Create Haul Range				x	x		
Create Haul Road				x	x		
Create Intersection				x	x		
Create Mass Haul Barrier				x	x		
Create Mass Haul Export				x	x		
Create Mass Haul Import				x	x		
Create Site Mass Haul Analysis				x	x		
Create Stored Cross-sections from CAD Drawings				x	x		
Custom Takeoff Report				x	x		
Customize Digitizer Button Profiles				x	x		
Define Areas of Interest				x	x		
Define Site Materials				x	x		








Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Define Strata				x	x		
Define Topsoil Stripping Areas				x	x		
Digitize Contour				x	x		
Digitize Cross-section				x	x		
Digitize Linestring				x	x		
Digitize Pad				x	x		
Digitizer Setup				x	x		
Earthwork Summary				x	x		
Edit Boring Log				x	x		
Edit Corridor Boring Log				x	x		
Edit Site Mass Haul Analysis				x	x		
Edit Zone Naming Settings				x	x		
Export Mass Haul Plan				x	x		
Export Site Mass Haul Plan VCL File				x	x		
Export TILOS Mass Haul XML File				x	x		
Identify Site Regions				x	x		
Load Intersection Template				x	x		
Mass Haul Balance View				x	x		
Mass Haul Editor				x	x		
Material Processing Report				x	x		
Name/Label Site Regions				x	x		
New Station/Offset View				x	x		
Overexcavation				x	x		
Paste Properties				x	x		
Refresh Mass Haul Analysis				x	x		
Save Intersection Template				x	x		
Select Child Lines				x	x		
Site Mass Haul Report				x	x		
Takeoff Report				x	x		
Track Cross-Section				x	x		
Use Excess Topsoil				x	x		
Validate Site Improvement Areas				x	x		
Adjust Photo Stations (Aerial Data)				x		x	
Advanced UAS				x		x	
Create Orthomosaic				x		x	
Create Point Cloud (Aerial)				x		x	
Create Raster DSM				x		x	
Extract Ground				x		x	
Flight Mission Adjustment Report				x		x	
Import DJI UAV Data				x		x	
Merge Flight Missions				x		x	
Open UASMaster				x		x	
Send to UASMaster				x		x	
senseFly eMotion Exporter				x		x	
Add Drill Hole to Drill Plan				x			
Add Tunnel Shape Template				x			
Assign Tunnel As-Built Points				x			
Assign Tunnel Convergence Points				x			
Blow Count Report				x			
Change Pile ID				x			
Copy Tunnel				x			
Create As-Built Tunnel Mesh				x			
Create Designed Tunnel Mesh				x			
Create Drill Plan				x			
Create Dynamic Compaction Plan				x			
Create Manual Drill Plan				x			
Create New Version				x			
Create Pile				x			
Create Pile Plan				x			

Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Create Piles at Points				x			
Create Pipe				x			
Create Trench Surface				x			
Create Tunnel				x			
Create Tunnel Alignment				x			
Create Tunnel Corridor				x			
Create Tunnel Inspection Map				x			
Create Tunnel Inspection Points				x			
Create Tunnel Shape				x			
Create Tunnel Shape From CAD				x			
Create Tunnel Template				x			
Create Utility Line				x			
Create Utility Network				x			
Create Utility Node				x			
Create Utility Run				x			
Drill Hole Quality Report				x			
Dynamic Compaction Quality Report				x			
Edit Drill Plan (and Rebuild)				x			
Edit Horizontal Tunnel Offset				x			
Edit Pile Types				x			
Edit Set Outs				x			
Edit Trench Template				x			
Edit Tunnel Rotation				x			
Edit Tunnel Shape				x			
Edit User-Defined Utility Shape				x			
Edit Utility Run				x			
Edit Vertical Tunnel Offset				x			
Export DPS900 Drill Plan				x			
Export DPS900 Dynamic Compaction Plan				x			
Export DPS900 Pile Plan				x			
Export SCS900 Tunnel XML File				x			
Export TXL				x			
Extract Classified Tunnel Regions				x			
Generate As-Drilled Points				x			
Generate Design Points				x			
Import TXL				x			
Insert Trench Template				x			
Insert Utility Node				x			
IREDES Drillplan Exporter				x			
Manage Pile Types				x			
Piling Quality Report				x			
Rebuild Drill Plan				x			
Rebuild Pile Plan				x			
Reverse Utility Run				x			
Select Hole by ID				x			
Select Tunnel Points				x			
Trench Template Manager				x			
Tunnel As-Built Report				x			
Tunnel ASCII Report				x			
Tunnel Convergence Report				x			
Tunnel Inspection Report				x			
Tunnel Inspection View				x			
Tunnel View				x			
Utility Takeoff Report				x			
Batch Register Run to Run							x
Export MX50 to Solv3D							x
Export MX50 to TMX							x
Export MX50 to TopoDOT							x
Export Mobile Mapping Calibration							x

Trimble Business Center v5.51 Subscription Command Matrix

Command	Good	Better	Best	Specialty			
							
Command	Starter	Site + Field	Survey + Mapping	Enterprise	Construction	Aerial Survey	Mobile Mapping
Generate PFI							x
Generate Scans							x
Import Mobile Mapping Calibration							x
LAS Export with Timestamp							x
Mobile Mapping Report							x
Process RAW Trajectory Data							x
Register Mobile Mapping Scans							x
Split Run							x
Update Scans							x
MX9 Laser Correction (in Mobile Mapping Generate Scans command)							x

Blue text denotes new or enhanced commands in v5.51

Disclaimer: Trimble reserves the right to change the licensing or make corrections to the program at any time through an update to Trimble Business Center and or a correction to this list. No guarantees are implied and you should confirm licensing details with your Geospatial Distribution Partner before purchasing.

TRANSFORMING THE WAY THE WORLD WORKS



© 2021, Trimble Inc. All rights reserved. Trimble and the Globe & Triangle logo are trademarks of Trimble Inc., registered in the United States and in other countries. All other trademarks are the property of their respective owners.