



Export GCS900 Machine Jobsite Design	x	x	x	x	x	x	x	x
Export GCS900 Machine Site Map	x	x	x	x	x	x	x	x
Export Measure Codes Definition File (.MCD)	x	x	x	x	x	x	x	x
Export Project Link Exporter VCL File	x	x	x	x	x	x	x	x
Export SIMA Format	x	x	x	x	x	x	x	x
Export Sketchup .skp Files	x	x	x	x	x	x	x	x
Export Somero .nod Files	x	x	x	x	x	x	x	x
Export Survey Controller Job File	x	x	x	x	x	x	x	x
Export Survey Data Collector DC File	x	x	x	x	x	x	x	x
Export Survey Pro Job File	x	x	x	x	x	x	x	x
Export TDS Interlock (.ij) File	x	x	x	x	x	x	x	x
Export Trimble Access job File	x	x	x	x	x	x	x	x
Export Trimble Access Road Strings	x	x	x	x	x	x	x	x
Export Trimble Access RXL Road Templates	x	x	x	x	x	x	x	x
Export Trimble Data Exchange Format (TDEF) File	x	x	x	x	x	x	x	x
Export Trimble JobXML Field Software Format	x	x	x	x	x	x	x	x
Feature Definition Manager	x	x	x	x	x	x	x	x
Filter Line Markings	x	x	x	x	x	x	x	x
Flags Pane	x	x	x	x	x	x	x	x
Float View	x	x	x	x	x	x	x	x
Front	x	x	x	x	x	x	x	x
Go To Run Position	x	x	x	x	x	x	x	x
Help	x	x	x	x	x	x	x	x
Imaging Config	x	x	x	x	x	x	x	x
Import	x	x	x	x	x	x	x	x
Import .l2da File (Basic)	x	x	x	x	x	x	x	x
Import l2d Color File	x	x	x	x	x	x	x	x
Import .asc ASCII, TDEF, Raw Data, InRoads Hz and Vt Alignment Files	x	x	x	x	x	x	x	x
Import .CAL Site Calibration Files	x	x	x	x	x	x	x	x
Import .dat DiNi Level Files	x	x	x	x	x	x	x	x
Import .dat STAR*Net Level Files	x	x	x	x	x	x	x	x
Import .eje MDT Hz Alignment Files	x	x	x	x	x	x	x	x
Import .inf Fast Survey Files	x	x	x	x	x	x	x	x
Import .pbj Rangefinder Laser Files	x	x	x	x	x	x	x	x
Import .raw (TDS, Nikon) Raw Data Files	x	x	x	x	x	x	x	x
import .sp3, sp3c precise ephemeris files	x	x	x	x	x	x	x	x
Import .xyz point Cloud Files	x	x	x	x	x	x	x	x
Import .xyz Point Cloud Files	x	x	x	x	x	x	x	x
Import ASCII CSV Files - PNEZD	x	x	x	x	x	x	x	x
Import ASCII CSV Files - Station, Offset, Elevation	x	x	x	x	x	x	x	x
Import Ashtech ProMark / ProFlex .crd Format	x	x	x	x	x	x	x	x
Import Ashtech ProMark / ProFlex .ddd Format	x	x	x	x	x	x	x	x
Import Autodesk DWG Format	x	x	x	x	x	x	x	x
Import Autodesk DXF Format	x	x	x	x	x	x	x	x
Import Bentley .icm.dgn iModel Files	x	x	x	x	x	x	x	x
Import Bentley Microstation dgn files	x	x	x	x	x	x	x	x
Import Business Center - HCE .VCL Project Link Files	x	x	x	x	x	x	x	x
Import CaAiCE .txt Files	x	x	x	x	x	x	x	x
Import Cartomap .txt Files	x	x	x	x	x	x	x	x
Import CLIP .alz Alignment Files	x	x	x	x	x	x	x	x
Import CLIP .plt Alignment Files	x	x	x	x	x	x	x	x
Import CLIP .trv Files	x	x	x	x	x	x	x	x
Import e57 Format	x	x	x	x	x	x	x	x
Import Fast Survey .sys Files	x	x	x	x	x	x	x	x
Import Format Editor	x	x	x	x	x	x	x	x
Import GCS900 .avoid Format	x	x	x	x	x	x	x	x
Import GCS900 .avoid.svl Avoidance Zone Files	x	x	x	x	x	x	x	x
Import GCS900 .cfg Coordinate System Files	x	x	x	x	x	x	x	x
Import GCS900 .dsp Format	x	x	x	x	x	x	x	x
Import GCS900 .mch Format	x	x	x	x	x	x	x	x
Import GCS900 .mch Measure Up Files	x	x	x	x	x	x	x	x
Import GCS900 .persist Format	x	x	x	x	x	x	x	x
Import GCS900 .pro Format	x	x	x	x	x	x	x	x
Import GCS900 .svd Files	x	x	x	x	x	x	x	x
Import GCS900 .svd Format	x	x	x	x	x	x	x	x
Import GCS900 .svl Files	x	x	x	x	x	x	x	x
Import GCS900 .svl Format	x	x	x	x	x	x	x	x

Import GCS900 .tsd Format	x	x	x	x	x	x	x	x
Import Geopak .xsr Cross Section Report File	x	x	x	x	x	x	x	x
Import HYDROpro .hpt Files	x	x	x	x	x	x	x	x
Import IFC Files	x	x	x	x	x	x	x	x
Import Inframodel .xml Files	x	x	x	x	x	x	x	x
Import InRoads .soe Files	x	x	x	x	x	x	x	x
Import IREDES .xml Tunnel and Drill Plan Files	x	x	x	x	x	x	x	x
Import ISPOL .ali Alignment Files	x	x	x	x	x	x	x	x
Import ISPOL .ras Vertical Alignment Files	x	x	x	x	x	x	x	x
Import ISPOL .sce and .scl Files	x	x	x	x	x	x	x	x
Import LandXML Format	x	x	x	x	x	x	x	x
Import LAS/LAZ Format	x	x	x	x	x	x	x	x
Import Measure Codes Definition File (.MCD)	x	x	x	x	x	x	x	x
Import MDT .ras Vertical Alignment Files	x	x	x	x	x	x	x	x
Import MDT .tra Files	x	x	x	x	x	x	x	x
Import MX GENIO .crd, .mos, .txt Files	x	x	x	x	x	x	x	x
Import NGS .ds Data Sheet Files	x	x	x	x	x	x	x	x
Import NGS .htm Data Sheet Files	x	x	x	x	x	x	x	x
Import NGS OPUS .xml Files	x	x	x	x	x	x	x	x
Import Nikon Job File	x	x	x	x	x	x	x	x
Import Norway .KOF Files	x	x	x	x	x	x	x	x
Import Norway .tit Files	x	x	x	x	x	x	x	x
Import Novapoint .gen Files	x	x	x	x	x	x	x	x
Import Novapoint .vgp Files	x	x	x	x	x	x	x	x
Import PCS900 .persist Display Configuration Files	x	x	x	x	x	x	x	x
Import POD Format	x	x	x	x	x	x	x	x
Import PTS Format	x	x	x	x	x	x	x	x
Import PTX Format	x	x	x	x	x	x	x	x
Import RCP Format	x	x	x	x	x	x	x	x
Import REB .021 Files	x	x	x	x	x	x	x	x
Import REB .040 Files	x	x	x	x	x	x	x	x
Import REB .066 Files	x	x	x	x	x	x	x	x
Import REB .66 Files	x	x	x	x	x	x	x	x
Import Report	x	x	x	x	x	x	x	x
Import Report	x	x	x	x	x	x	x	x
Import SBG .geo Files	x	x	x	x	x	x	x	x
Import SBG .gt Files	x	x	x	x	x	x	x	x
Import SBG .lin Files	x	x	x	x	x	x	x	x
Import SBG .jlc Files	x	x	x	x	x	x	x	x
Import SBG .lmd Files	x	x	x	x	x	x	x	x
Import SBG .nyl Files	x	x	x	x	x	x	x	x
Import SBG .prf Files	x	x	x	x	x	x	x	x
Import SBG .pxy Files	x	x	x	x	x	x	x	x
Import SBG .sec Files	x	x	x	x	x	x	x	x
Import SBG .skv Files	x	x	x	x	x	x	x	x
Import SCS900 .gcj Work Order Files	x	x	x	x	x	x	x	x
Import SCS900 .ini Site Settings File	x	x	x	x	x	x	x	x
Import SCS900 .spj Work Order Files	x	x	x	x	x	x	x	x
Import SCS900 .txt Work Order Results File	x	x	x	x	x	x	x	x
Import Sitepulse .epj Work Order Result Files	x	x	x	x	x	x	x	x
Import Sketchup .skp Files	x	x	x	x	x	x	x	x
Import Somero .nod Files	x	x	x	x	x	x	x	x
Import SOSI Format	x	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor .asc Format	x	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor .dat Format	x	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor .xml Format	x	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor ASCII Format	x	x	x	x	x	x	x	x
Import Spectra Precision Focus DL-15 Level Files	x	x	x	x	x	x	x	x
Import Survey Pro .job Format	x	x	x	x	x	x	x	x
Import Survey Pro .raw Format	x	x	x	x	x	x	x	x
Import Survey Pro .survey Format	x	x	x	x	x	x	x	x
Import Survey Pro .xml Format	x	x	x	x	x	x	x	x
Import TDS Interlock .ilj Format	x	x	x	x	x	x	x	x
Import Terramodel PRO Files	x	x	x	x	x	x	x	x
Import Trimble .dat GNSS Files	x	x	x	x	x	x	x	x
Import Trimble .dc Data Collector Files	x	x	x	x	x	x	x	x
Import Trimble .dc Site Calibration Files	x	x	x	x	x	x	x	x
Import Trimble .FXL Feature Code Library Files	x	x	x	x	x	x	x	x

Import Trimble .pav Paving Run Files	x	x	x	x	x	x	x	x
Import Trimble .RXL RoadXML Files	x	x	x	x	x	x	x	x
Import Trimble .tdx Data Exchange Files	x	x	x	x	x	x	x	x
Import Trimble .tsf Scanner Files	x	x	x	x	x	x	x	x
Import .TRB TrimBim Files	x	x	x	x	x	x	x	x
Import Trimble .ttm Surface Model Files	x	x	x	x	x	x	x	x
Import Trimble Access .dc Format	x	x	x	x	x	x	x	x
Import Trimble Access .job Format	x	x	x	x	x	x	x	x
Import Trimble Access .jxl Format	x	x	x	x	x	x	x	x
Import Trimble Access .rxl Format	x	x	x	x	x	x	x	x
Import Trimble Access .xml Format	x	x	x	x	x	x	x	x
Import Trimble Digital Fieldbook .dc Format	x	x	x	x	x	x	x	x
Import Trimble Digital Fieldbook .job Format	x	x	x	x	x	x	x	x
Import Trimble Digital Fieldbook .xml Format	x	x	x	x	x	x	x	x
Import Trimble GNSS .dat Format	x	x	x	x	x	x	x	x
Import Trimble GNSS .t00, .t01, .t02 Files	x	x	x	x	x	x	x	x
Import Trimble GNSS .t00/t01/t02 Format	x	x	x	x	x	x	x	x
Import Trimble Survey Controller .dc Format	x	x	x	x	x	x	x	x
Import Trimble Survey Controller .job Format	x	x	x	x	x	x	x	x
Import Trimble Survey Controller .jxl Format	x	x	x	x	x	x	x	x
Import Trimble Survey Controller .rxl Format	x	x	x	x	x	x	x	x
Import Trimble Survey Controller .xml Format	x	x	x	x	x	x	x	x
Import Trimble Survey Manager .jxl Format	x	x	x	x	x	x	x	x
Import Trimble Survey Manager ASCII Format	x	x	x	x	x	x	x	x
Import Trimble Survey Pro .survey files	x	x	x	x	x	x	x	x
Import Wirth .yxz Files	x	x	x	x	x	x	x	x
Import Work Order Results	x	x	x	x	x	x	x	x
Import/Export User Options	x	x	x	x	x	x	x	x
Invert Selection	x	x	x	x	x	x	x	x
Job Report Generator	x	x	x	x	x	x	x	x
Job Site Design Manager	x	x	x	x	x	x	x	x
Job Site Manager	x	x	x	x	x	x	x	x
Layer Group Manager	x	x	x	x	x	x	x	x
Layer Manager	x	x	x	x	x	x	x	x
Left	x	x	x	x	x	x	x	x
Left Mouse Pan	x	x	x	x	x	x	x	x
Left Mouse Rotate	x	x	x	x	x	x	x	x
Left Mouse Select	x	x	x	x	x	x	x	x
Left Mouse Zoom	x	x	x	x	x	x	x	x
License Manager	x	x	x	x	x	x	x	x
Material and Site Improvement Manager	x	x	x	x	x	x	x	x
Measure Angle	x	x	x	x	x	x	x	x
Measure Distance	x	x	x	x	x	x	x	x
Measure Point	x	x	x	x	x	x	x	x
Move to Next Tab Group	x	x	x	x	x	x	x	x
Move to Previous Tab Group	x	x	x	x	x	x	x	x
New 3D Drive View	x	x	x	x	x	x	x	x
New 3D View	x	x	x	x	x	x	x	x
New Cross-Section View	x	x	x	x	x	x	x	x
New Default Project	x	x	x	x	x	x	x	x
New Feature Library	x	x	x	x	x	x	x	x
New Horizontal Tab Group	x	x	x	x	x	x	x	x
New Oblique Camera View	x	x	x	x	x	x	x	x
New Plan View	x	x	x	x	x	x	x	x
New Plan View (old architecture)	x	x	x	x	x	x	x	x
New Profile View	x	x	x	x	x	x	x	x
New Project	x	x	x	x	x	x	x	x
New Station View	x	x	x	x	x	x	x	x
New Station View (referenced images)	x	x	x	x	x	x	x	x
New Vertical Tab Group	x	x	x	x	x	x	x	x
Office Synchronizer	x	x	x	x	x	x	x	x
Online GNSS Planning	x	x	x	x	x	x	x	x
Open Project	x	x	x	x	x	x	x	x
Open Remote File	x	x	x	x	x	x	x	x
Options	x	x	x	x	x	x	x	x
Orthographic	x	x	x	x	x	x	x	x
Pan	x	x	x	x	x	x	x	x
Pan Precise	x	x	x	x	x	x	x	x
Perspective	x	x	x	x	x	x	x	x

Plane Manager	x	x	x	x	x	x	x	x
Planning	x	x	x	x	x	x	x	x
Polygon Select	x	x	x	x	x	x	x	x
Presentation Mode	x	x	x	x	x	x	x	x
Process SCS work order symbols	x	x	x	x	x	x	x	x
Process View	x	x	x	x	x	x	x	x
Profile Viewer	x	x	x	x	x	x	x	x
Project Explorer	x	x	x	x	x	x	x	x
Project Settings	x	x	x	x	x	x	x	x
Properties	x	x	x	x	x	x	x	x
Publish Designs to WorksManager	x	x	x	x	x	x	x	x
Publish Field Data To Business Data Center	x	x	x	x	x	x	x	x
Publish Field Data to Project Library	x	x	x	x	x	x	x	x
Publish Library to USB	x	x	x	x	x	x	x	x
Publish to Clarity	x	x	x	x	x	x	x	x
Publish to WorksOS	x	x	x	x	x	x	x	x
Quadri Connector	x	x	x	x	x	x	x	x
Quality Assurance Report	x	x	x	x	x	x	x	x
Reassign External Job Site Design	x	x	x	x	x	x	x	x
Reassign Work Order	x	x	x	x	x	x	x	x
Rectangle Select	x	x	x	x	x	x	x	x
Redo	x	x	x	x	x	x	x	x
Right	x	x	x	x	x	x	x	x
Run Last Command	x	x	x	x	x	x	x	x
Run View (Panoramic View)	x	x	x	x	x	x	x	x
Save As Clone	x	x	x	x	x	x	x	x
Save File Remotely	x	x	x	x	x	x	x	x
Save Project	x	x	x	x	x	x	x	x
Save Project As	x	x	x	x	x	x	x	x
Save Project As Template	x	x	x	x	x	x	x	x
SCS Data Manager	x	x	x	x	x	x	x	x
Select All	x	x	x	x	x	x	x	x
Select by Layer	x	x	x	x	x	x	x	x
Select by Polygon	x	x	x	x	x	x	x	x
Select Points	x	x	x	x	x	x	x	x
Selection Explorer	x	x	x	x	x	x	x	x
Send Backward	x	x	x	x	x	x	x	x
Send to Back	x	x	x	x	x	x	x	x
Set Limit Box	x	x	x	x	x	x	x	x
Set Menu Layout	x	x	x	x	x	x	x	x
Side Planar View (Side Camera View)	x	x	x	x	x	x	x	x
SiteVision AR Exporter	x	x	x	x	x	x	x	x
Spectra Geospatial Origin Job File Exporter	x	x	x	x	x	x	x	x
Snap Mode	x	x	x	x	x	x	x	x
Start Page	x	x	x	x	x	x	x	x
Station View Image Filter	x	x	x	x	x	x	x	x
Stored Measurements Report	x	x	x	x	x	x	x	x
Surface Slicer View	x	x	x	x	x	x	x	x
Tile Sequence Viewer	x	x	x	x	x	x	x	x
Toggle Gridlines	x	x	x	x	x	x	x	x
Toggle Line Marking	x	x	x	x	x	x	x	x
Toggle Visibility	x	x	x	x	x	x	x	x
Toggle Z-Axis	x	x	x	x	x	x	x	x
Top	x	x	x	x	x	x	x	x
Tours and Tutorials	x	x	x	x	x	x	x	x
Trimble Access Services	x	x	x	x	x	x	x	x
Trimble Clarity	x	x	x	x	x	x	x	x
Trimble Sync	x	x	x	x	x	x	x	x
Trimble Sync Manager	x	x	x	x	x	x	x	x
Undo	x	x	x	x	x	x	x	x
View 3D Preset Last Used	x	x	x	x	x	x	x	x
View Filter Manager	x	x	x	x	x	x	x	x
View Mission Trajectory (Toggle Trajectory)	x	x	x	x	x	x	x	x
Walk-Through	x	x	x	x	x	x	x	x
WorksManager	x	x	x	x	x	x	x	x
WorksManager Design Manager	x	x	x	x	x	x	x	x
WorksManager Field Data to USB Drive	x	x	x	x	x	x	x	x
WorksManager Project	x	x	x	x	x	x	x	x
WorksOS	x	x	x	x	x	x	x	x
Work Order Editor	x	x	x	x	x	x	x	x
Work Order Report	x	x	x	x	x	x	x	x
Work Order Report	x	x	x	x	x	x	x	x
Work Orders Summary	x	x	x	x	x	x	x	x
Workflow Guides	x	x	x	x	x	x	x	x
Write FXL to CSV	x	x	x	x	x	x	x	x
Zoom	x	x	x	x	x	x	x	x
Zoom Extents	x	x	x	x	x	x	x	x
Zoom In	x	x	x	x	x	x	x	x
Zoom Out	x	x	x	x	x	x	x	x
Zoom Precise	x	x	x	x	x	x	x	x
ADAC SettingsV2 (SITECHCS)	x	x	x	x	x	x	x	x

Add/Remove Selection		x	x	x	x	x	x	x
Advanced Select		x	x	x	x	x	x	x
As Staked Corridor Report		x	x	x	x	x	x	x
As Staked Report		x	x	x	x	x	x	x
Batter Conformance Report		x	x	x	x	x	x	x
Break Line		x	x	x	x	x	x	x
Change Coordinate System		x	x	x	x	x	x	x
Clip Lines		x	x	x	x	x	x	x
Combine Level Files		x	x	x	x	x	x	x
Coordinate System Comparison Report		x	x	x	x	x	x	x
Copy Objects		x	x	x	x	x	x	x
Create Arc		x	x	x	x	x	x	x
Create Block		x	x	x	x	x	x	x
Create Boundary		x	x	x	x	x	x	x
Create Circle		x	x	x	x	x	x	x
Create Dependent Point		x	x	x	x	x	x	x
Create Linestring		x	x	x	x	x	x	x
Create Plotbox		x	x	x	x	x	x	x
Create Point		x	x	x	x	x	x	x
Create Polygon		x	x	x	x	x	x	x
Create Polyline		x	x	x	x	x	x	x
Create Rectangle		x	x	x	x	x	x	x
Create Text		x	x	x	x	x	x	x
Create Three Point Circle		x	x	x	x	x	x	x
Create Three Point Rectangle		x	x	x	x	x	x	x
Datum Gridding		x	x	x	x	x	x	x
Delete Line Segment		x	x	x	x	x	x	x
Detect Crossing Geometry		x	x	x	x	x	x	x
Disable Redundant Backsights		x	x	x	x	x	x	x
Divide Line		x	x	x	x	x	x	x
Edit		x	x	x	x	x	x	x
Edit Dependent Point		x	x	x	x	x	x	x
Edit Linestring		x	x	x	x	x	x	x
Edit Text		x	x	x	x	x	x	x
Explode		x	x	x	x	x	x	x
Explode Points		x	x	x	x	x	x	x
Export .laz Point Clouds		x	x	x	x	x	x	x
Export ADAC File		x	x	x	x	x	x	x
Export Applanix Smartbase Format		x	x	x	x	x	x	x
Export BlueBook Format		x	x	x	x	x	x	x
Export Digital Fieldbook Job File		x	x	x	x	x	x	x
Export e57 Point Clouds		x	x	x	x	x	x	x
Export e57 Structured		x	x	x	x	x	x	x
Export ESRI Shapefile Format		x	x	x	x	x	x	x
Export Field Surveyor V2 Job File		x	x	x	x	x	x	x
Export Format Editor		x	x	x	x	x	x	x
Export Google KML/KMZ Format		x	x	x	x	x	x	x
Export IFC		x	x	x	x	x	x	x
Export Inframodel File		x	x	x	x	x	x	x
Export KOF Vector Data File		x	x	x	x	x	x	x
Export LandXML File		x	x	x	x	x	x	x
Export las Point Clouds		x	x	x	x	x	x	x
Export pod point Clouds		x	x	x	x	x	x	x
Export pts Point Clouds		x	x	x	x	x	x	x
Export ptx Point Clouds		x	x	x	x	x	x	x
Export rcp Point Clouds (Autodesk recap)		x	x	x	x	x	x	x
Export RINEX Format		x	x	x	x	x	x	x
Export SDMS Format		x	x	x	x	x	x	x
Export SOSI Format		x	x	x	x	x	x	x
Export Trajectory CSV File		x	x	x	x	x	x	x
Export TTM File		x	x	x	x	x	x	x
External Processing Services		x	x	x	x	x	x	x
Feature Attributes Export		x	x	x	x	x	x	x
Feature Code Processing Report		x	x	x	x	x	x	x
Geodatabase XML Exporter		x	x	x	x	x	x	x
Geoid Sub-Gridding		x	x	x	x	x	x	x
Google Earth		x	x	x	x	x	x	x
Import Blocks		x	x	x	x	x	x	x
Insert Blocks		x	x	x	x	x	x	x
Import ESRI Shapefile Format		x	x	x	x	x	x	x
Inverse		x	x	x	x	x	x	x
Inverse Results Report		x	x	x	x	x	x	x
Join Lines		x	x	x	x	x	x	x
Level Editor		x	x	x	x	x	x	x
Level Report		x	x	x	x	x	x	x
Line Style Manager		x	x	x	x	x	x	x
Line Type Editor		x	x	x	x	x	x	x
Local Site Settings		x	x	x	x	x	x	x
Mean Angle Report		x	x	x	x	x	x	x
Mean Angle Residuals		x	x	x	x	x	x	x
Merge Points		x	x	x	x	x	x	x
Mirror Objects		x	x	x	x	x	x	x
Move Objects		x	x	x	x	x	x	x

Move Survey Point		x	x	x	x	x	x	x
Name Objects		x	x	x	x	x	x	x
New Feature Spreadsheet		x	x	x	x	x	x	x
New Layer		x	x	x	x	x	x	x
New Occupation Spreadsheet		x	x	x	x	x	x	x
New Optical Spreadsheet		x	x	x	x	x	x	x
New Points Spreadsheet		x	x	x	x	x	x	x
New Vector Spreadsheet		x	x	x	x	x	x	x
Offset Line		x	x	x	x	x	x	x
Page Setup		x	x	x	x	x	x	x
Pipeline Attributes		x	x	x	x	x	x	x
Point Comparison Report		x	x	x	x	x	x	x
Point Derivation Report		x	x	x	x	x	x	x
Point List Report		x	x	x	x	x	x	x
Point Symbol		x	x	x	x	x	x	x
Print		x	x	x	x	x	x	x
Print Preview		x	x	x	x	x	x	x
Process Feature Codes		x	x	x	x	x	x	x
Processing Services		x	x	x	x	x	x	x
Project Computation Report		x	x	x	x	x	x	x
Publish to TCC		x	x	x	x	x	x	x
Purge Blocks		x	x	x	x	x	x	x
Quality Assurance Report		x	x	x	x	x	x	x
Related Files		x	x	x	x	x	x	x
Relayer Objects		x	x	x	x	x	x	x
Rename Points		x	x	x	x	x	x	x
Renamed Point List Report		x	x	x	x	x	x	x
Report Options		x	x	x	x	x	x	x
Rotate Objects		x	x	x	x	x	x	x
Save As Site		x	x	x	x	x	x	x
Scale Objects		x	x	x	x	x	x	x
Select by Elevation Range		x	x	x	x	x	x	x
Select Duplicate Points		x	x	x	x	x	x	x
Select Observations		x	x	x	x	x	x	x
Select Points by Vector		x	x	x	x	x	x	x
Select Unprocessed Sessions		x	x	x	x	x	x	x
Start Data Service		x	x	x	x	x	x	x
Station Panorama Exporter		x	x	x	x	x	x	x
Symbol Editor		x	x	x	x	x	x	x
Symbol Manager		x	x	x	x	x	x	x
TDX Export		x	x	x	x	x	x	x
Text Style Manager		x	x	x	x	x	x	x
TopoDOT Export - Terrestrial Scan Data		x	x	x	x	x	x	x
Vector List Report		x	x	x	x	x	x	x
Write Features to GIS Report		x	x	x	x	x	x	x
X7 Export to TMX		x	x	x	x	x	x	x
Add Legend			x	x	x	x	x	x
Add Surface Texture			x	x	x	x	x	x
Add to Point Cloud Region			x	x	x	x	x	x
Add/Remove Surface Boundaries			x	x	x	x	x	x
Add/Remove Surface Members			x	x	x	x	x	x
Alignment Editor			x	x	x	x	x	x
Alignment Geometry Report			x	x	x	x	x	x
Append to Alignment			x	x	x	x	x	x
Append Tracked Line			x	x	x	x	x	x
AreaLengthCountReport			x	x	x	x	x	x
Average Points			x	x	x	x	x	x
Big Point Size			x	x	x	x	x	x
Blended Display			x	x	x	x	x	x
Change Elevation			x	x	x	x	x	x
Change Global to Local			x	x	x	x	x	x
Change Local to Global			x	x	x	x	x	x
Clip Selected			x	x	x	x	x	x
Clip Unselected			x	x	x	x	x	x
Color Regions By Elevation			x	x	x	x	x	x
Colorize Region			x	x	x	x	x	x
Convert As-Staked Point			x	x	x	x	x	x
Convert CAD Points			x	x	x	x	x	x
Convert Global to Local			x	x	x	x	x	x
Convert Local To Global			x	x	x	x	x	x
Copy Stored Cross-Section			x	x	x	x	x	x
Copy To Profile			x	x	x	x	x	x
Create Alignment			x	x	x	x	x	x
Create Alignment From a GENIO 6D String			x	x	x	x	x	x
Create Breakline			x	x	x	x	x	x
Create CAD Points from Scan Points (Scan to CAD)			x	x	x	x	x	x
Create Contour at Elevation			x	x	x	x	x	x
Create Contours			x	x	x	x	x	x
Create Cut/Fill Map			x	x	x	x	x	x
Create Hatch			x	x	x	x	x	x
Create Horizontal Alignment Label			x	x	x	x	x	x
Create Linestring from Points			x	x	x	x	x	x

Create Planar Surface			X	X	X	X	X	X
Create Point Cloud Region			X	X	X	X	X	X
Create Points at Intervals			X	X	X	X	X	X
Create Points from CAD			X	X	X	X	X	X
Create Quick Contour at Elevation			X	X	X	X	X	X
Create Quick Contours			X	X	X	X	X	X
Create Stored Cross-Section			X	X	X	X	X	X
Create Surface			X	X	X	X	X	X
Create Surface Cross-Section			X	X	X	X	X	X
Create Surface Edge Breakline			X	X	X	X	X	X
Create Surface Elevation Grid			X	X	X	X	X	X
Create Surface Intersection			X	X	X	X	X	X
Create Surface Intersection Lines			X	X	X	X	X	X
Create Surface Profile			X	X	X	X	X	X
Create Surface Tie			X	X	X	X	X	X
Create Volume Grid			X	X	X	X	X	X
Define Corridor Strata			X	X	X	X	X	X
Densify An Alignment Based Surface			X	X	X	X	X	X
Drape Objects On Surface			X	X	X	X	X	X
Earthwork Report			X	X	X	X	X	X
Edit Alignment Labels			X	X	X	X	X	X
Edit Color Mapping			X	X	X	X	X	X
Export RXL Road Format from Alignment			X	X	X	X	X	X
Export RXL Road Format From Surface			X	X	X	X	X	X
Extra Large Point Size			X	X	X	X	X	X
Fillet/Chamfer			X	X	X	X	X	X
Finished Pavement Report			X	X	X	X	X	X
Finished Surface Report			X	X	X	X	X	X
Flatten Surface			X	X	X	X	X	X
Geometry Report			X	X	X	X	X	X
Get All points			X	X	X	X	X	X
Get Unused Points			X	X	X	X	X	X
Keep In			X	X	X	X	X	X
Keep Out			X	X	X	X	X	X
Label Contours By Crossing			X	X	X	X	X	X
Large Point Size			X	X	X	X	X	X
Match Properties			X	X	X	X	X	X
Measure Volume			X	X	X	X	X	X
Medium Point Size			X	X	X	X	X	X
Merge Regions			X	X	X	X	X	X
Merge Surfaces			X	X	X	X	X	X
Move/Rotate/Scale Objects			X	X	X	X	X	X
Move/Rotate/Scale Objects by Points			X	X	X	X	X	X
MSI Report			X	X	X	X	X	X
Normal Shading			X	X	X	X	X	X
Number of loaded points (display Options)			X	X	X	X	X	X
Pavement Conformance Report			X	X	X	X	X	X
Point Cloud Rendering Settings			X	X	X	X	X	X
Points to Surface			X	X	X	X	X	X
Points to Surface Report			X	X	X	X	X	X
REB 21.003 Volume Report			X	X	X	X	X	X
REB 21.033 Linear Surface Areas Report			X	X	X	X	X	X
REB 22.013 Prismatic Volume Report			X	X	X	X	X	X
REB 23.003 Calculation Report			X	X	X	X	X	X
REB Tools			X	X	X	X	X	X
Rebuild Alignment Labels			X	X	X	X	X	X
Rebuild Contours			X	X	X	X	X	X
Rebuild Surface			X	X	X	X	X	X
Render Point Cloud Region			X	X	X	X	X	X
Render Point Cloud Region Using Color-Coded Intensity			X	X	X	X	X	X
Render Point Cloud Region Using Gray-Scale Intensity			X	X	X	X	X	X
Render Point Cloud Region Using Region Color			X	X	X	X	X	X
Render Point Cloud Region Using Scan Color			X	X	X	X	X	X
Render Point Cloud Regions Using Color by Elevation			X	X	X	X	X	X
Render Point Cloud Regions Using True Color			X	X	X	X	X	X
RenderByBlendedIntensity			X	X	X	X	X	X
Rendering Settings			X	X	X	X	X	X
RenderPointCloudSwitch			X	X	X	X	X	X
Restore All			X	X	X	X	X	X
Restore Region			X	X	X	X	X	X
Sample Point Cloud Regions			X	X	X	X	X	X
Sample Point Clouds			X	X	X	X	X	X
Select Similar			X	X	X	X	X	X
Set Line Elevation			X	X	X	X	X	X
Shrink 3D Faces			X	X	X	X	X	X
Small Point Size			X	X	X	X	X	X

Standardize Layers			x	x	x	x	x	x
Stored Cross-Section Editor			x	x	x	x	x	x
Surface Information Report			x	x	x	x	x	x
Swap Surface Triangles			x	x	x	x	x	x
Switch Point Size			x	x	x	x	x	x
Track Region Outline			x	x	x	x	x	x
Trim Surface Edge			x	x	x	x	x	x
Trim/Extend Lines			x	x	x	x	x	x
Trimble Access Roads Strings			x	x	x	x	x	x
Trimble Access Roads RXL Templates			x	x	x	x	x	x
Add/Remove Image Boundaries				x	x	x	x	x
Adjust Network				x	x	x	x	x
Adjust Traverse				x	x	x	x	x
ALTA/NSPS Allowable Relative Tolerance Report				x	x	x	x	x
Baseline Processing Report				x	x	x	x	x
Capture 3D				x	x	x	x	x
Capture Image				x	x	x	x	x
Clear Adjustment Results				x	x	x	x	x
Clear Processing Results				x	x	x	x	x
Clear Site Calibration				x	x	x	x	x
Clear Traverse Adjustment Result				x	x	x	x	x
Copy View To Clipboard				x	x	x	x	x
Create Angular Dimensions				x	x	x	x	x
Create Custom Report				x	x	x	x	x
Create Leader Lines				x	x	x	x	x
Create Line Label Table				x	x	x	x	x
Create Linear Dimensions				x	x	x	x	x
Create Point Label Table				x	x	x	x	x
Create Polygon Label Table				x	x	x	x	x
Dimension Style Manager				x	x	x	x	x
Disable Baselines				x	x	x	x	x
Disable Sessions				x	x	x	x	x
Disable Trajectories				x	x	x	x	x
Edit Custom Report				x	x	x	x	x
Edit Dimensions				x	x	x	x	x
Edit Label Table				x	x	x	x	x
Enable Baselines				x	x	x	x	x
Enable Sessions				x	x	x	x	x
Enable Trajectories				x	x	x	x	x
Find and Replace				x	x	x	x	x
Flip an Azimuth Bearing Label				x	x	x	x	x
Force Continuous				x	x	x	x	x
Georeference Image				x	x	x	x	x
Georeference Vector PDF				x	x	x	x	x
GNSS Loop Closure				x	x	x	x	x
GNSS Loop Closure Results Report				x	x	x	x	x
Import Vector PDF Data				x	x	x	x	x
Insert Image				x	x	x	x	x
Internet Download				x	x	x	x	x
Label Lines				x	x	x	x	x
Label Points				x	x	x	x	x
Label Polygons				x	x	x	x	x
Label Style Manager				x	x	x	x	x
Label Table Style Manager				x	x	x	x	x
Labelling Scale Factor				x	x	x	x	x
Map Objects				x	x	x	x	x
Network Adjustment Report				x	x	x	x	x
New Time-Based View				x	x	x	x	x
Pavement Conformance Report (Advanced)				x	x	x	x	x
Place Image				x	x	x	x	x
Process Baselines				x	x	x	x	x
Reverse Lines				x	x	x	x	x
Send to RTX-PP				x	x	x	x	x
Session Editor				x	x	x	x	x
Show Map				x	x	x	x	x
Site Calibration				x	x	x	x	x
Site Calibration Report				x	x	x	x	x
String Report				x	x	x	x	x
Swap Label Sides				x	x	x	x	x
Toggle Background Map				x	x	x	x	x
Total Station Editor				x	x	x	x	x
Traverse Adjustment Report				x	x	x	x	x
Best-Fit Line					x	x	x	x
Build Sheets					x	x	x	x
Camera Calibration					x	x	x	x
Camera Calibration Check Report					x	x	x	x
Combine Surfaces					x	x	x	x
Copy to Sheet					x	x	x	x
Corridor Definition Report					x	x	x	x
Corridor Earthwork Report					x	x	x	x
Create 3D PDF					x	x	x	x
Create COGO					x	x	x	x

Create Corridor					X	X	X	X
Create Corridor Surface					X	X	X	X
Create Custom Sheet					X	X	X	X
Create Dynaview					X	X	X	X
Create Dynaview Boundary Collection					X	X	X	X
Create Plan Set					X	X	X	X
Create Point Cloud (non-Aerial)					X	X	X	X
Create Projected Surface					X	X	X	X
Create Quick Profile					X	X	X	X
Create Radial Surface					X	X	X	X
Create Rectified Image					X	X	X	X
Create Scale Bar					X	X	X	X
Create Shareable Slope Table					X	X	X	X
Create Sheet Set					X	X	X	X
Create Side Slope					X	X	X	X
Create Tunnel Inspection Map					X	X	X	X
Define Depth Plane					X	X	X	X
Delete Dynaview Boundary Collection					X	X	X	X
Double Proportioning					X	X	X	X
Double Proportioning Report					X	X	X	X
Drafting Templates					X	X	X	X
Dynaview Collection					X	X	X	X
Edit Corridor					X	X	X	X
Edit Corridor Template					X	X	X	X
Edit Dynaview Boundary Collection					X	X	X	X
Edit Shareable Slope Table					X	X	X	X
Edit Sheet Set					X	X	X	X
Explode Dynaview Grid					X	X	X	X
Explode Surface					X	X	X	X
Flight Mission Exporter					X	X	X	X
Grid Style Manager					X	X	X	X
Group Photo Stations					X	X	X	X
History Log View					X	X	X	X
Import MXDB Database					X	X	X	X
Insert Corridor Template					X	X	X	X
Legal Description Writer					X	X	X	X
Macros					X	X	X	X
Manage Material Layers					X	X	X	X
Manage Template Node Names					X	X	X	X
Manual Camera Calibration					X	X	X	X
Manual (MX7) Camera Calibration					X	X	X	X
Map Check Report					X	X	X	X
Mapillary Panorama Exporter					X	X	X	X
Measure Photo Point					X	X	X	X
Merge Survey Projects					X	X	X	X
MX9 Export to Solv3D					X	X	X	X
New Block Edit View					X	X	X	X
New Photo Point Spreadsheet					X	X	X	X
New Sheet View					X	X	X	X
Print Plan Set					X	X	X	X
Process Panoramas					X	X	X	X
Reproject Surface					X	X	X	X
Roughness Index Report					X	X	X	X
Single Proportioning					X	X	X	X
Single Proportioning Report					X	X	X	X
Station Offset Elevation Report					X	X	X	X
Superelevation Diagram					X	X	X	X
Superelevation View					X	X	X	X
Terrestrial Bundle Adjustment Report					X	X	X	X
TopoDOT Export - Mobile Mapping Data					X	X	X	X
Transform Survey Points					X	X	X	X
Transform Survey Points Report					X	X	X	X
Trimble MX Cubical Exporter					X	X	X	X
Trimble MX Panorama Exporter					X	X	X	X
Virtual DR					X	X	X	X
XML Horus Exporter					X	X	X	X
Apply Surface Site Improvement						X	X	X
Create Machine Data Overlay						X	X	X
Create Machine Data Surface						X	X	X
Create Points from Spot Elevations						X	X	X
Create Subgrade Surface						X	X	X
Create Uncompacted PCS Surface						X	X	X
Create Vertical Design						X	X	X
Detailed Cell Viewer						X	X	X
Edit Machine Data						X	X	X
Edit Vertical Design						X	X	X
Edit/View Machine Data Overlay						X	X	X
Elevate Contour						X	X	X
Elevate Contours by Crossing						X	X	X
Elevate Contours by Label						X	X	X
Elevate Lines						X	X	X



Command	Aerial Photogrammetry	ANZ Toolbox	Drilling Piling Dynamic Compaction	GIS	Mobile Mapping	MM MX9 Laser Correction	Monitoring	Scanning	Tunneling	Utility Modeling
Adjust Photo Stations (Aerial Data)	x									
Advanced UAS	x									
Create Orthomosaic	x									
Create Point Cloud (Aerial)	x									
Create Raster DSM	x									
Flight Mission Adjustment Report	x									
Import DJI UAV Data	x									
Merge Flight Missions	x									
Open UASMaster	x									
Send to UASMaster	x									
senseFly eMotion Exporter	x									
ADAC Exporter		x								
ADAC Settings v5.01		x								
Adjust Polyline with Bowditch		x								
Browse for Import File		x								
Convert to CAD Points		x								
Convert to Horizontal Linestring		x								
Convert to Multiline Text		x								
Edit Linestring Elevation		x								
Explode Corridor Mass Haul		x								
Export 12da File (Advanced)		x								
Find and Replace Points		x								
Import 12da File (Advanced)		x								
Import ADAC File		x								
Insert Alignment Table		x								
Insert Excel Table		x								
Insert Vertices From Points		x								
Line Node Cleanup		x								
Map Objects		x								
Measure Perpendicular		x								
Measure Surface		x								
Move Line		x								
Pavement Conformance Report (Advanced)		x								
Regroup Layers		x								
Rename Layers		x								
Rename Objects		x								
Reverse Lines		x								
Set Sewage Connection Attributes		x								
Show Line Direction Options		x								
String Conformance Report		x								
Surface Area Report Tool		x								
Add Drill Hole to Drill Plan			x							
Blow Count Report			x							
Change Pile ID			x							
Create Drill Plan			x							
Create Dynamic Compaction Plan			x							
Create Manual Drill Plan			x							
Create New Version			x							
Create Pile			x							
Create Pile Plan			x							
Create Piles at Points			x							
Drill Hole Quality Report			x							
Dynamic Compaction Quality Report			x							
Edit Drill Plan (and Rebuild)			x							
Edit Pile Types			x							
Export DPS900 Drill Plan			x							
Export DPS900 Dynamic Compaction Plan			x							
Export DPS900 Pile Plan			x							
Generate As-Drilled Points			x							
Generate Design Points			x							
IREDES Drillplan Exporter			x							
Manage Pile Types			x							
Piling Quality Report			x							
Rebuild Drill Plan			x							
Rebuild Pile Plan			x							
Select Hole by ID			x							
Add GIS Connection				x						
Export ESRI File Geodatabase				x						
Get GIS Schema				x						
GIS Connection Manager				x						
Import .cor Files				x						
Import ESRI File Geodatabase				x						
Import SSF Files				x						
Map Metadata				x						
Read Features from GIS				x						
Remove GIS Connection				x						
Write Features to GIS				x						
Batch Register Run to Run					x					
Export Mobile Mapping Calibration					x					
Export MX50 to Solv3D					x					
Export MX50 to TMX					x					
Export MX50 to TopoDOT					x					
Generate PFI					x					
Generate Scans					x					
Import Mobile Mapping Calibration					x					
LAS Export with Timestamp					x					
Mobile Mapping Report					x					
Process RAW Trajectory Data					x					
Register Mobile Mapping Scans					x					
Split Run					x					
Update Scans					x					
MX9 Laser Correction (in Mobile Mapping Generate Scans command)						x				
Assign Monitoring Project							x			
Create Monitoring Points							x			
Monitoring Points Spreadsheet							x			
Show Monitoring Chart							x			

